


The LED display on the PDI will show:


- Voltage of each monitored phase
- Voltage sag or complete power loss on monitored phase(s)
- Transient spike or surge on monitored phase(s)
- Number of half cycle voltage loss, up to 10 half cycles

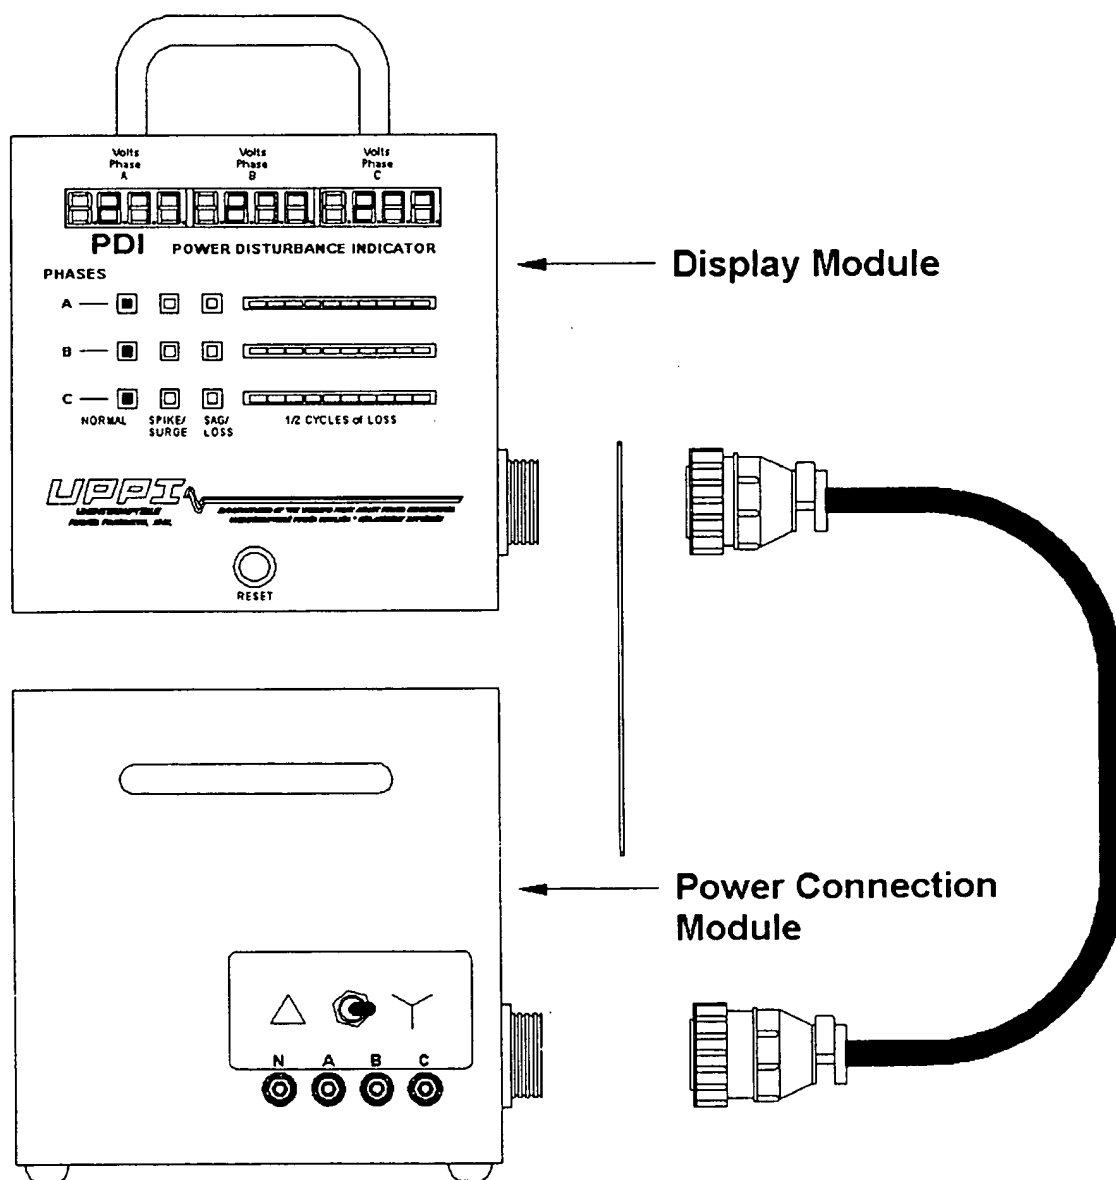


101 PDI - front view



- Voltage of each monitored phase
- Voltage sag or complete power loss on monitored phase(s)
- Transient spike or surge on monitored phase(s)
- Number of half cycle voltage loss, up to 10 half cycles

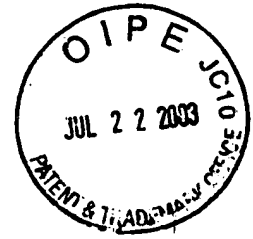

11 PDI - front view

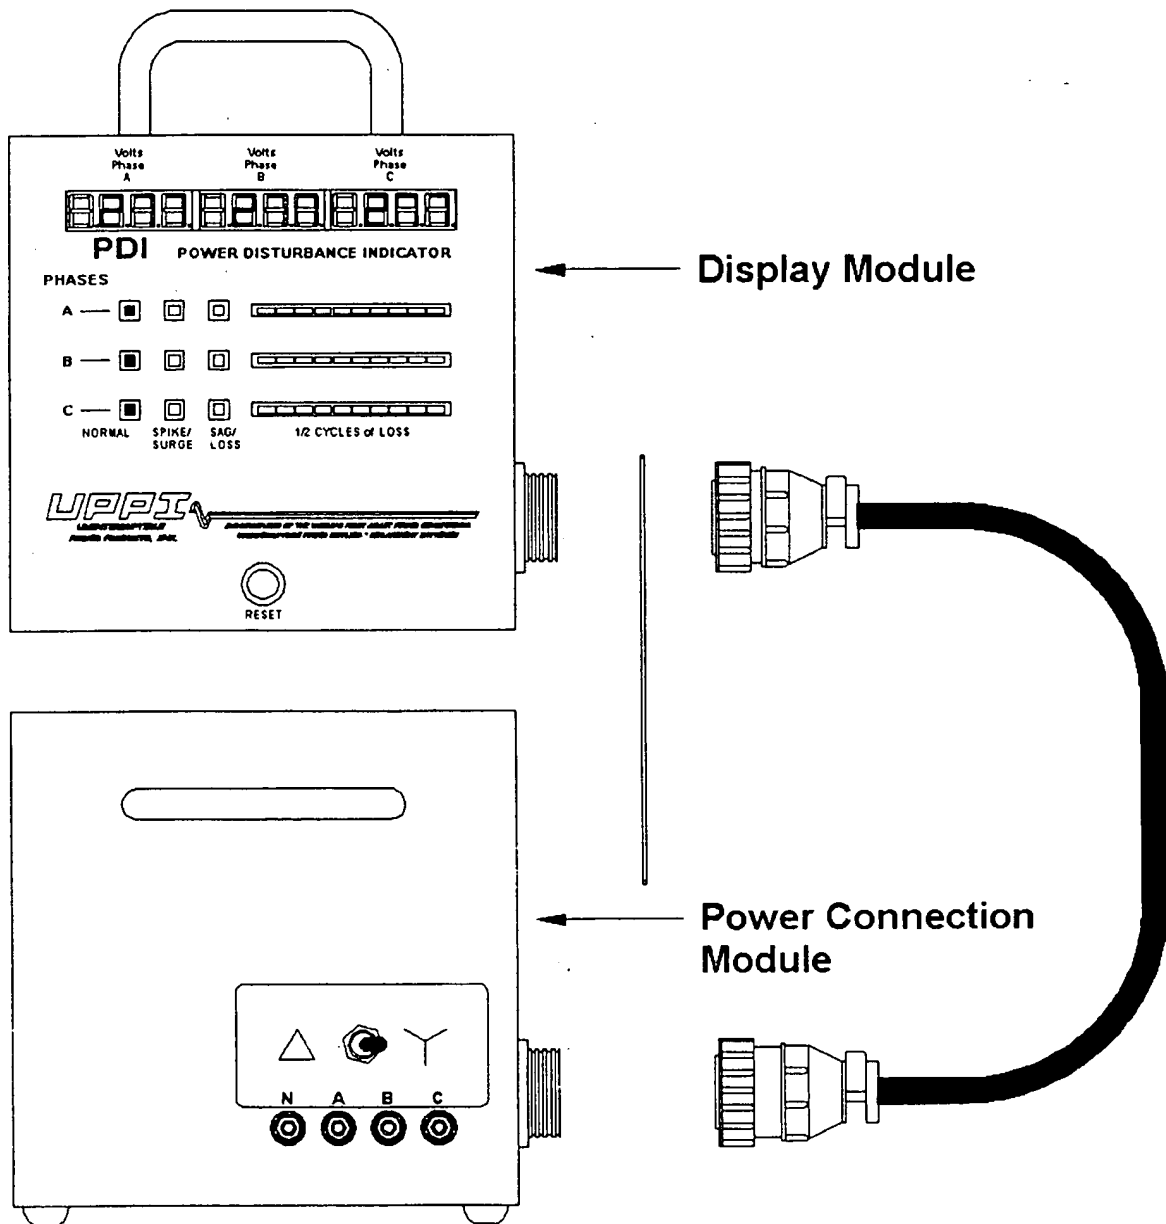

Page from owner's manual

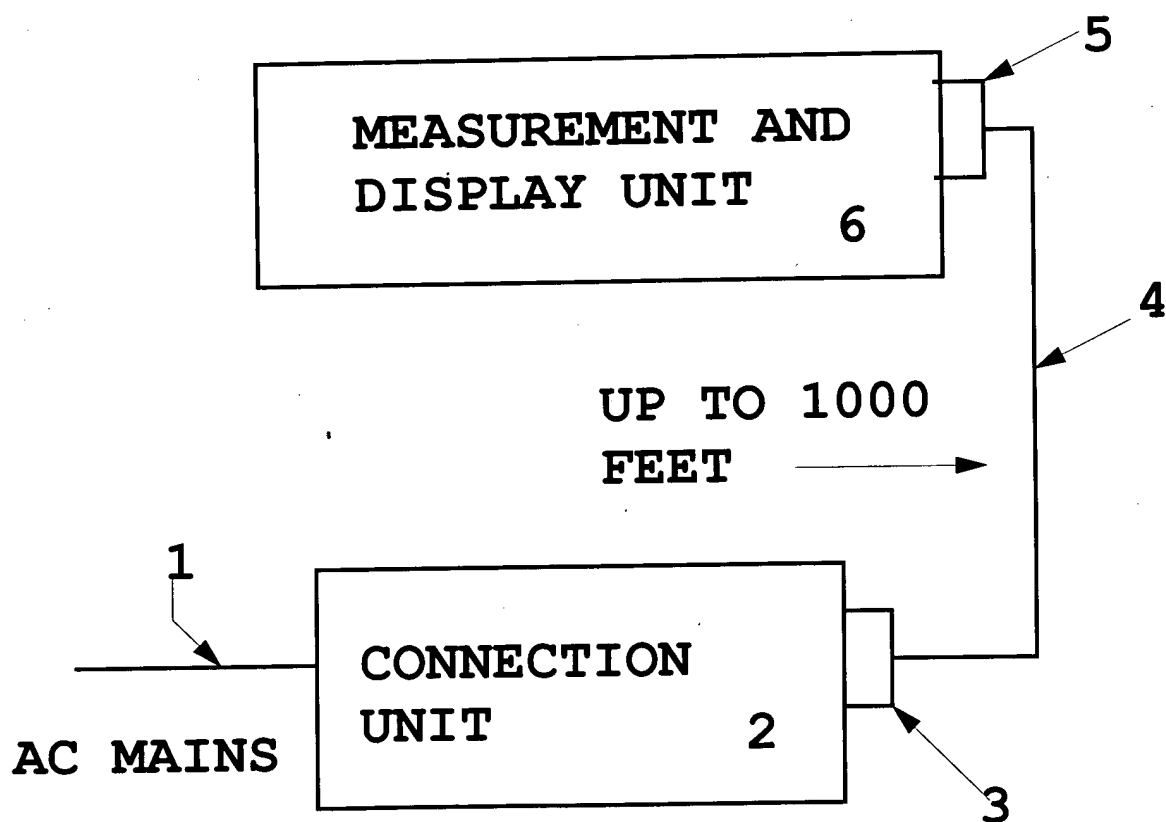


FIGURE 1

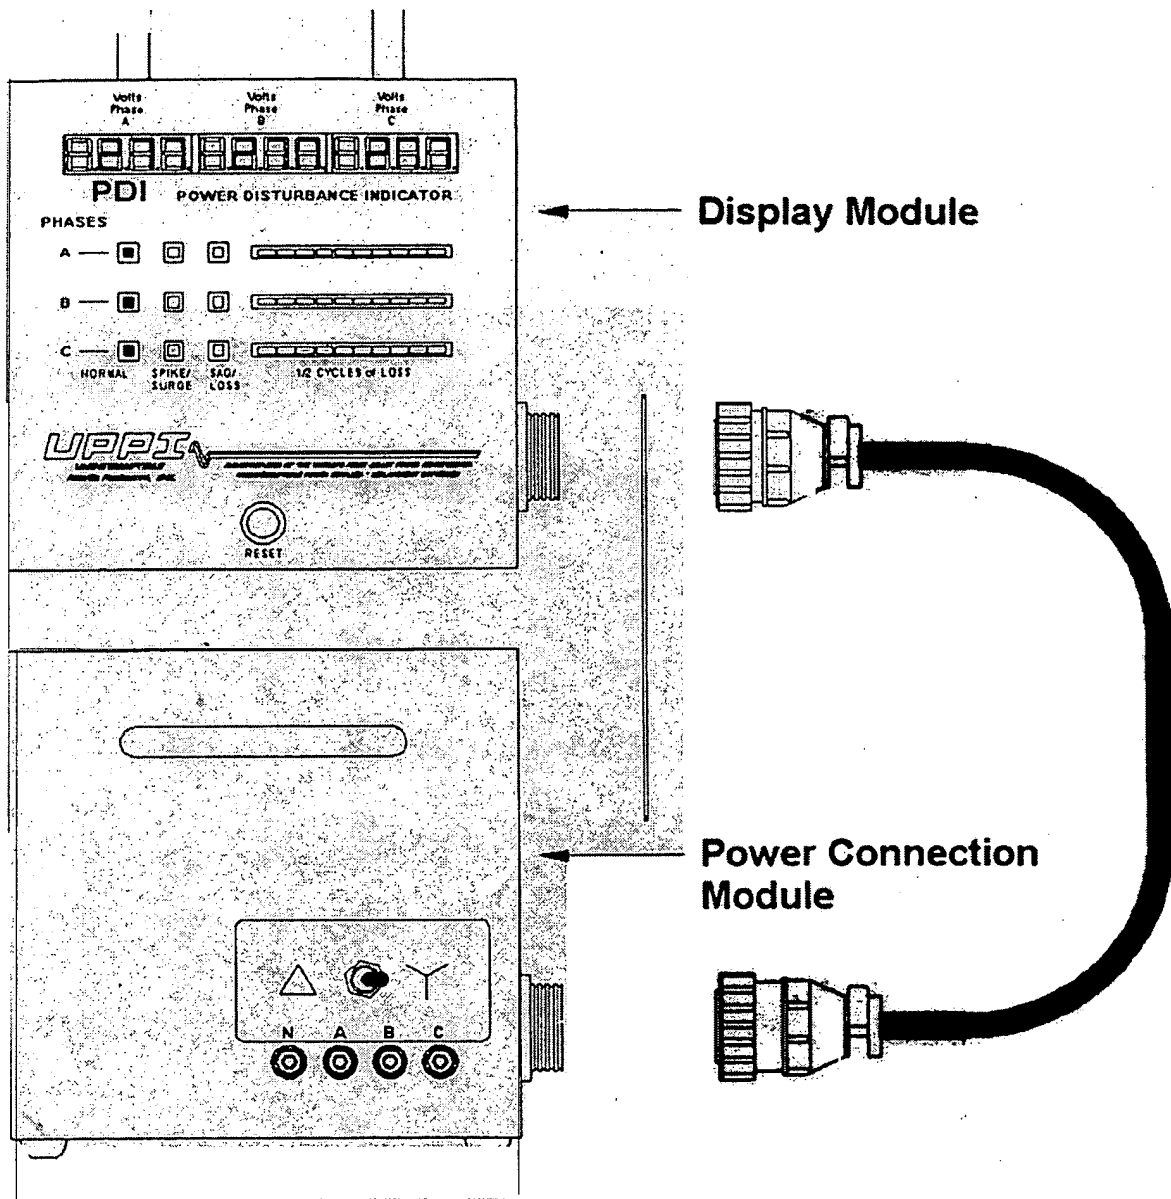
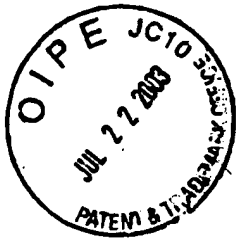


FIGURE 7



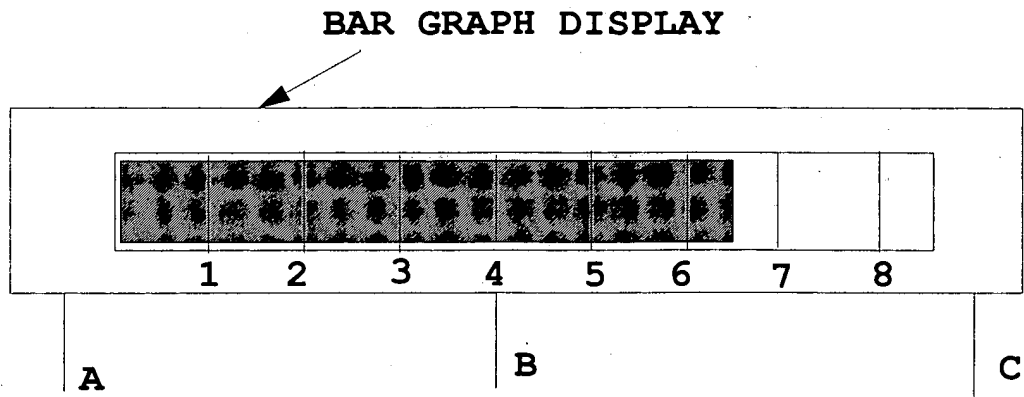


FIGURE 8

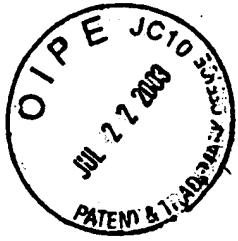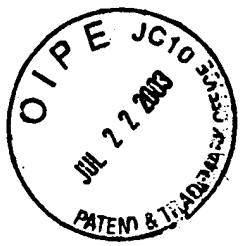

BAR GRAPH DISPLAY

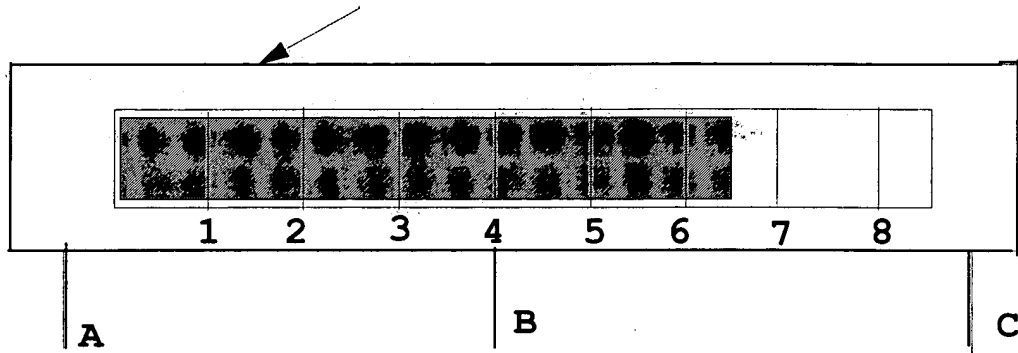


FIGURE 8

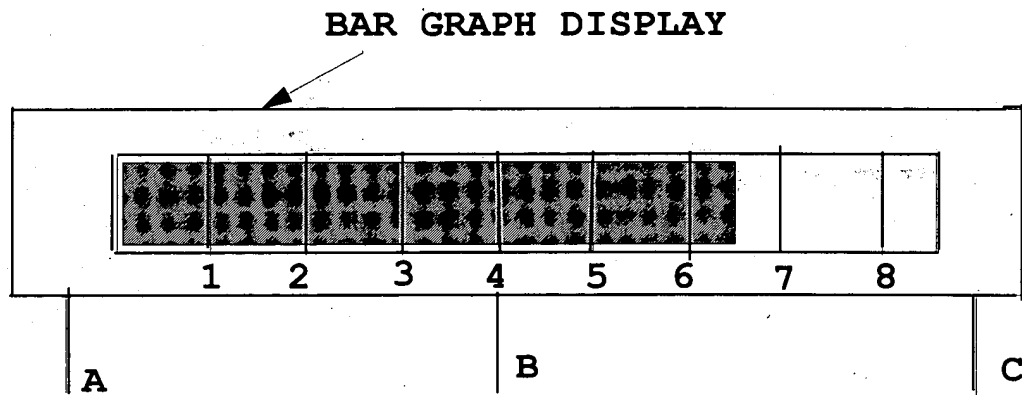
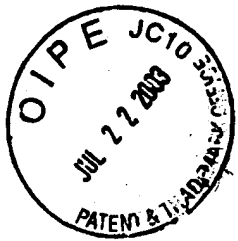


FIGURE 8